


4.6 CM x 6.8 CM

RX MULTI

MANUAL RX MULTI 300 TO 868 MHz

1.RX Multi drawing

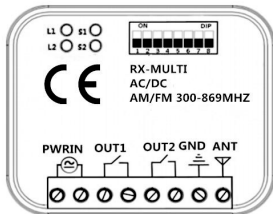

1

RX MULTI

2.Brand Selector

With 8 DIPs switches, the user can make different combinations for different remote brands.

The brands selection is shown below in table 1.

3.Learn Button and LED

In RX MULTI receiver, there are 2 independent channels. Each channel has independent learn button S1, S2 and L1, L2 corresponding LED. This receiver can memorize up to 256 remotes.

4.Power Input Selector

The RX Multi can work at input AC/DC 12V-30V. However, it's better to change the jumper according to the power supply. If the input is over 24V, shorten pin3&5, shorten L&2. If input is less than 24V, (See image from selection 5).

5.Exchangeable Memory Card

The memory card can be removed from board to insert in a different receiver; this way the user can preserve all the remotes learned in the memory card. See image from selection 5.

6.Entry one button or remote

1-First, select the correct brand for remote control that will be entry (by dip switch following table 1).

2-Press the learn button (S1 for S2), the corresponding LED turns on.

3-Press the button on the remote, the LED L1 or L2 flashes 4 times. This remote button entered the RX Multi successfully.

Repeat steps 2 and 3 for another button.


7.Erase all data in memory card :

Pressing and holding any learn button, the LED starts flashing. Keep pressing this button until the LED turns off. All data in the memory can be erased permanently.

Notice : Be carefully at erasing all data in the memory card. The data will be erased permanently and can't be recovered.

8.Details Picture

Location of LEDs, buttons, DIP selector, memory card and jumper

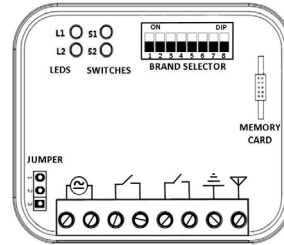

3

RX MULTI

1	1 2 3 4 5 6 7 8	NICE FLORES	433.92 MHz	
2	1 2 3 4 5 6 7 8	MARANTEC	433.92 MHz	
3	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	433.92 MHz	
4	1 2 3 4 5 6 7 8	FAAC SLH Rolling Code	433.92 MHz	
5	1 2 3 4 5 6 7 8	Ultmaster	310 MHz	
6	1 2 3 4 5 6 7 8	Ultmaster	390 MHz	
7	1 2 3 4 5 6 7 8	Ultmaster	433.92 MHz	

4

RX MULTI

8	1 2 3 4 5 6 7 8	Universal Rolling Open Code	433.92 MHz	Open Code
9	1 2 3 4 5 6 7 8	Universal Rolling Open Code	315 MHz	Open Code
10	1 2 3 4 5 6 7 8	Universal Rolling Open Code	318 MHz	Open Code
11	1 2 3 4 5 6 7 8	Universal Rolling Code ASK	868 MHz	Open Code
12	1 2 3 4 5 6 7 8	Universal Rolling Code FSK	868 MHz	Open Code
13	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	300 MHz	Fixed Code
14	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	310 MHz	Fixed Code

5

RX MULTI

15	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	315 MHz	Fixed Code
16	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	318 MHz	Fixed Code
17	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	330 MHz	Fixed Code
18	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	390 MHz	Fixed Code
19	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo	868 MHz	Fixed Code
20	1 2 3 4 5 6 7 8	Ultmaster Rolling Code Rollcode	390 MHz	
21	1 2 3 4 5 6 7 8	Ultmaster Rolling Code	315 MHz	

6

RX MULTI

22	1 2 3 4 5 6 7 8	Hormann Marantec Berner	868 MHz	
23	1 2 3 4 5 6 7 8	FAAC SLH	868 MHz	
24	1 2 3 4 5 6 7 8	Prostel	433.92 MHz	
25	1 2 3 4 5 6 7 8	Sommer	868.80 MHz	
26	1 2 3 4 5 6 7 8	Sommer	434.4 MHz	
27	1 2 3 4 5 6 7 8	Ultmaster Rolling Code	868.30 MHz	
28	1 2 3 4 5 6 7 8	Clemas Mastercode	433.92 MHz	

7

RX MULTI

29	1 2 3 4 5 6 7 8	DITEC	315 MHz	
30	1 2 3 4 5 6 7 8	DITEC	390 MHz	
31	1 2 3 4 5 6 7 8	DITEC	433.92 MHz	
32	1 2 3 4 5 6 7 8	V2	315 MHz	
33	1 2 3 4 5 6 7 8	V2	390 MHz	
34	1 2 3 4 5 6 7 8	V2	433.92 MHz	
35	1 2 3 4 5 6 7 8	MARANTEC	868.30 MHz	

8

RX MULTI

36	1 2 3 4 5 6 7 8	Apimatic Encrypted Code	433.92 MHz	
37	1 2 3 4 5 6 7 8	Apimatic Encrypted Code	868.3 MHz	
38	1 2 3 4 5 6 7 8	JCM GO	868.3 MHz	
39	1 2 3 4 5 6 7 8	JCM TECH	868.3 MHz	
40	1 2 3 4 5 6 7 8	P.N.C	868.3 MHz	
41	1 2 3 4 5 6 7 8	MAP	868.3 MHz	

9

RX MULTI

42	1 2 3 4 5 6 7 8	FORSA	868.3 MHz	
43	1 2 3 4 5 6 7 8	ALMA	868.3 MHz	
44	1 2 3 4 5 6 7 8	DMIL	868.3 MHz	
45	1 2 3 4 5 6 7 8	CEA	868.3 MHz	
46	1 2 3 4 5 6 7 8	Roper	868.3 MHz	

NOTA: Para dar de alta el mando de la marca FAAC en el RX MULTI seguir los siguientes pasos:
1- Presionar el mismo tiempo los canales 1 y 3 del mando de FAAC, el mando comenzará a parpadear.
2- Presionar en el RX MULTI en canal donde se grabará el mando. El led se quedará fijo.
3- Presionar varias veces el botón del mando de FAAC que quiere grabar.

10

RX MULTI

NOTE: For to register the FAAC remotes in the RX MULTI we must to follow the next steps:
1- Press the channels 2 and 3 the FAAC remote the same time, the remote start to blink.
2- Press in the RX MULTI the channel where you want copy the remote. The led stays fixed.
3- Press several time the button the FAAC remote what usted want to copy.

11